

City of Huntington Beach

Department of Community Development **EV CHARGER CHECKLIST**

2000 Main Street, Huntington Beach, CA 92648 Office: (714) 536 - 5241 Fax: (714) 374 - 1647

Purpose

The purpose of this guideline is to assist permit applicants in streamlining the permitting and inspection process for Residential Single Family EV Chargers.

☐ Site Plan

Provide two copies of the job-specific site plan showing:

- ☐ The location of the building and street name
- ☐ All EV receptacle location(s), conduit type / size, wire type / size, conductors, equipment ground size, and existing or proposed electric meter location
- ☐ Zoning Code Compliance


■ Manufacturer's Specifications

Provide two copies of the manufacturer's charger specifications. These specifications will show requirements and data for the EV charger being installed as well as a listing agency approval.

☐ Electrical Service Load Calculation Form

Provide two copies of our Electrical Service Calculation Form. Follow steps one thru nine to figure out the minimum amperage needed for your main electric meter.

Sample Site Plan

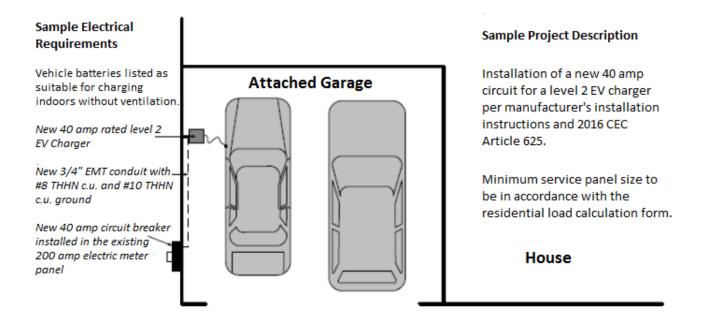



2000 Main Street 3rd Floor Huntington Beach, Ca 92648 714/536-5241

Optional Method Service Load Calculation for a Single Dwelling Unit (CEC 220.82)

	1.	General Lighting and Receptacle Loads 220.82(B)(1) Do not include open porches, garages, or unused or	3 x	=	1	
		unfinished spaces not adaptable for future use.	(sq ft using outside dimensions)	1		
	2.	Small-Appliance Branch Circuits 20.82(b)(2)	-			
		At least two small-appliance branch circuits must be	1500 x	_=	2	
		included. 210.11(C)(2)	(minimum of two)			
	3.	Laundry Brach Circuit(s) 220.82(B)(2)				
		At least one laundry branch circuit must be included.	1500 x	_=	3	
		210.11(C)(2).	(minimum of one)	, ,		
			NOTE: 1500 VA shall be included	ror eacn		
	4	Appliances 200 00/D\/2\ and (4)	laundry branch circuit.			
	4.	Appliances 220.82(B)(3) and (4) Use nameplate rating of all Do not include a or air-conditioni				
		appliances (fastened in place, equipment in the				
		permanently connected, or				
		connected to a specific circuit), <u>water heater/</u> //			4	
		clothes dryers. Convert any nameplate clothes dryer/				
		rating given in amperes to volt-amperes disposal / / //				
		by multiplying the amperes by the <u>range /</u> /				
		rated voltage. <u>EV / / / / / / / / / / / / / / / / / / /</u>				
	5. Apply 220.82(B) demand factor to the total of lines 1 through 4.				_	
		40.000	. 10 000		5	
		10,000 = x 40' (total of line 1 through 4)	% =+ 10,000 =			
	6. Heating or Air-Condition System 220.82(C) A) Air-Conditioning and cooling systems, including heat pur					ag hoat numps
	Use the nameplate ratings in volt-amperes for all without any supplemental electric hea					ig neat pumps
	applicable systems in lines 'a' through 'c'.			icotino ricat	iiig.	
		.,,,	x 100%	. =	Α	
B)		tric thermal storage and other heating systems where the	C) Supplemental electric heating equipment for			
	usual load is expected to be continuous at full nameplate systems. Include the heat-pump comp					
	value. Systems qualifying under this section shall not be heat-pump compressor is prevented f				erating with the	
	figur	figured under any other selection in 220.82(C). supplement heat, omit the compressor				
		x 65% =				
		x 100% = B	x 05%	=	С	
		X 100% =				
	7. Total Volt-Ampere					
	Demand Load:					
	+=			_=	7	
		(largest VA rating from line 6a through 6c)	(line 5)			
	8.	Minimum Amperes		um Size		
		Divide the total	Servic			
		Volt-amperes	Feede		9	(minimum in
		by the voltage. (line 7) (voltage)	(minimum 240.6 amperes)	(A)		(minimum is 100 amperes)
	10. Size the Service of Feeder Conductors.					100 amperes)
	Use 310.15(B)(6) to find the service conductors up to 400 amperes. Minimum Size			um Size		
	Ratings in excess of 400 amperes shall comply with Table 310.16. Conductors			10		
		310.15(B)(6) also applies to feeder conductors serving as the main power feeder.				
		()				
	11. Size the Grounding Electrode Conductors. Use line 10 to find the grounding electrode conductor in Table 250.66.					
		Size the Equipment Grounding Conductor (for Feeder). 250.122. Minimum Size			12	
		Use line 9 to find the equipment grounding conductor in Table 250.122. Conductors		ctors		
	Equipment grounding conductor types are listed in 250.118.					